

## *SETTINGS FOR REMOTE CONNECTION TO DVR*

### Dynamic DVR Server



### Client Setup

1. Double click on client or net icon on the desktop.
2. Enter username and Password and click edit.
3. Choose Add Delete site information and click New

Site Name = (The name/code registered with [dynamicdvr.com](http://dynamicdvr.com) for DVR)

Metod = SERVER

IP/Tel # = [www.dynamicdvr.com](http://www.dynamicdvr.com)

username = username on dvr

password =password on dvr

4. Click OK to exit.