

SETTINGS FOR REMOTE CONNECTION TO DVR

Dynamic DVR Server



DVR Setup

1. Double click on **DVR Setting** icon on the desktop.
2. Type in the administrative **username** and **password** to enter DVR Settings.
3. Click on System.
4. On **System** Setup under Network.

Note: You must register the name (code) with dynamicdvr.com and enter that registration code to use as your identification on the Dynamic IP server for DVR.

5. Enter the following:

Code = (The name registered for your DVR) - check Use IP Server
IP Server = www.dynamicdvr.com
Notify Interval = 0 Hour = 1 min
and click OK.